
Serpentine Coils

COMPACT HEAT EXCHANGERS FOR CONDENSER AND EVAPORATOR APPLICATIONS

- DESIGN AND SPECIFICATIONS
- INSTALLATION GUIDELINES
- MAINTENANCE

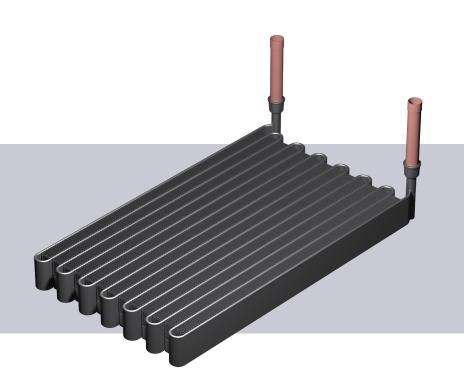

TECHNICAL MANUAL

ENGLISH









KALTRA SERPENTINE COILS

CUSTOMER SERVICES

Maintenance and Warranty

As standard, Kaltra guarantees heat exchangers for a period of 24 months uncoated and 60 months e-coated, variations tailored to suit product and application are also available; please contact Kaltra for full terms and details.

For a free quotation contact Kaltra or your local sales engineer. All Kaltra products are designed in accordance with European and international standards and norms.



CAUTION

Warranty cover is not a substitute for maintenance. Warranty cover is conditional to maintenance being carried out in accordance with the recommendations provided during the warranty period. Failure to have the maintenance procedures carried out will invalidate the warranty and any liabilities by Kaltra.

In addition to warranty services, a 24 hour, 7 days a week on-call service is available throughout the year to EU sites. This service will enable customers to contact a duty engineer outside normal working hours and receive assistance over the telephone or per email. The duty engineer can, if necessary, attend site. Full details will be forwarded on acceptance of the maintenance agreement.

Service Contacts

For further assistance, please e-mail: support@kaltra.de or telephone:

 Sales enquiries:
 +49 (0) 911 715 320 21
 sales@kaltra.de

 24/7 support hotline:
 +49 (0) 151 418 586 90
 support@kaltra.de

 Information:
 +49 (0) 089 943 998 66
 info@kaltra.de

 Delivery:
 +49 (0) 911 715 320 21
 delivery@kaltra.de

 Spares:
 +49 (0) 911 715 320 21
 spares@kaltra.de

Kaltra endeavours to ensure that the information in this document is correct and fairly stated, but none of the statements are to be relied upon as a statement or representation of fact. Kaltra does not accept liability for any error or omission, or for any reliance placed on the information contained in this document. The development of Kaltra products and services is continuous and the information in this document may not be up to date. It is important to check the current position with Kaltra at the address stated. This document is not part of a contract or licence unless expressly agreed.

No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying, recording, or information storage and retrieval systems, for any purpose other than the purchaser's personal use, without the express written permission of Kaltra.

© 2020 Kaltra GmbH. All rights reserved. Printed in Germany.

SAFETY

The information contained in this manual is critical to correct installation and maintenance of heat exchangers and should be read by all persons responsible for the procedures mentioned above.

Heat exchangers have been designed and manufactured to meet international safety standards, but care must be taken if you are to obtain the best results.



CAUTION

Installation and maintenance work on heat exchangers should be undertaken by competent and trained personnel in accordance with local relevant standards and codes of practice.

Improperly installed, adjusted or altered equipment by an unqualified person could result in death or severe injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

Personal Protective Equipment and Handling

Kaltra recommends that personal protective equipment is used while installing and servicing heat exchangers. Some operations, when servicing heat exchangers, may require additional assistance with regard to manual handling. This requirement is down to the discretion of the engineer.

Refrigerant Warning

When working with or around hazardous chemicals, including refrigerants, always refer to the appropriate instructions and guidelines for information on allowable personal exposure levels, proper respiratory protection and handling recommendations.



IMPORTANT

All personnel being responsible for the operation, installation, and maintenance of heat exchangers must carefully read and fully understand these instructions before transportation, loading/unloading, handling, installing, and servicing heat exchangers.



CAUTION

Heat exchangers and connecting pipework can operate at high pressure of refrigerants due to their nature of applications. It is essential to follow safety rules and recommendations when working with pressurized equipment, to use proper gauges and personal protection equipment. Only trained personnel can be allowed to install, commission, and maintenance of the heat exchangers.

CONTENT

Customer Services	1
Maintenance and Warranty	1
Service Contacts	1
Safety	2
Personal Protective Equipment and Handling	2
Refrigerant Warning	2
Introduction	4
Purpose of Present Manual	4
Product Applications	4
Product Advantages Product Labeling	4
Operating Conditions	5
Refrigerants	5
Heat Exchanger Design	6
General Design	6
Materials	6
Microchannel Tubes	7
Airside Fins	8
Louvered Fins	8
Flat Fins	8
Refrigerant Connections Mountings and Fixtures	9
Protective Coatings	9
Epoxy Electrophoretic Coating	10
Trivalent Chromium Process Coating	12
Storage, Handling, and Transportation	13
Packing	13
Storage	13
Handling .	13
Transportation	13
Installation	14
Mounting	14
Airtightness Thermal Expansion	14 14
Vibrations and Stresses	15
Connecting Refrigerant Lines	15
Refrigerant Charge and Evacuation	15
Maintenance	16
Maintenance Schedule	16
Cleaning Procedure	16
Services	18
Engineering	18
Selection Software	18

INTRODUCTION

Purpose of Present Manual

The purpose of the present manual is to guide engineers through the selection process of microchannel serpentine coils subject to application, operating and environmental requirements and conditions. The manual provides Kaltra customers with recommendations for installation, operating parameters, maintenance, and troubleshooting of serpentine coils.



IMPORTANT

The development and improvement of Kaltra microchannel heat exchanger products are continuous, and the information in the present manual may not be up to date.

Please check the current position with Kaltra.

Product Applications

Serpentine heat exchangers are intended for use as condensing or evaporating coils in wide range of air conditioning, cooling, and refrigeration applications and equipment. Coils are designed for use with a variety of refrigerants, including HFC- and HFO-based gases and derivative mixtures, natural refrigerants and blends.



IMPORTANT

Ensure your serpentine coil is suitable for use with your particular refrigerant prior to use! Allowable refrigerants are listed in supplied data sheets and on the product sticker.

Product Advantages


Serpentine heat exchangers are of interest because they can remove large amounts of heat over a small volume. This ability makes this type of microchannel coils well suited for highly specific applications that require compact high heat-removal solutions such as electronics, metrology, telecommunications, cooling of laser devices, mobile cooling systems, consumer products, medical and biomedical processes, and chemical industries. Serpentine heat exchangers are characterized by the following features and benefits:


- High heat transfer performance thanks to brazed joints
- Low internal volume and up to 60% less refrigerant charge
- · High corrosion resistance
- · Lower airside pressure drops
- Less weight
- · Compact and robust design
- · Optimized raw material cost
- · Easy to recycle

Kaltra uses strong long-life aluminum alloys (SLLAs) in the manufacturing of microchannel tubes. These alloys - specially developed for HVAC applications - demonstrate ultimate corrosion resistance not found in other products. We offer surface treatments like electrocoating and trivalent chromium process (TCP) coating to boost corrosion protection even for the use of our heat exchangers in marine atmosphere and highly-polluted environments. Performance, quality, and other characteristics of our heat exchangers are confirmed by appropriate certifications, laboratory tests, and proven in the field.


Product Labeling

The product label identifies the product and provides essential information about the product and its use, including allowed refrigerant type(s), internal coil volume, design pressure and temperature. The product label is affixed to the left side of the heat exchanger.



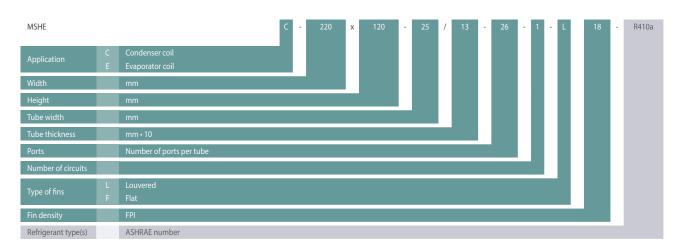

Operating Conditions

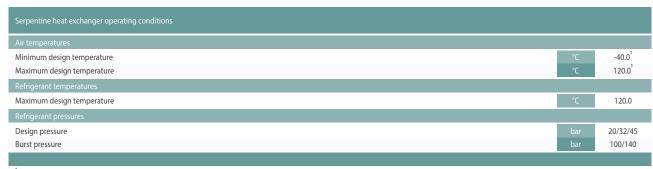

⁻ for heat exchanger coils with e-coating: -40.0°C to 165.0°C; for heat exchanger coils with TCP-coating: -30.0°C to 150.0°C



IMPORTANT

Design operating pressure value can be found on the product label.

Refrigerants

Kaltra's serpentine heat exchangers are suitable for all HFC- and HFO-based refrigerants and mixtures composed of hydro-fluoro olefins and hydrofluorocarbons. Additionally, heat exchangers can be used with natural refrigerants - ammonia and range of hydrocarbon refrigerants, including propane and isobutane.

 $Refrigerants\ to\ use\ with\ heat\ exchangers\ shall\ comply\ with\ EN\ 378-2:2017\ and/or\ AHRI\ Standard\ 700.$





Refrigerants allowed to use with your serpentine heat exchanger are listed on the product label and/or datasheets supplied with the product.

HEAT EXCHANGER DESIGN

General Design

The construction of a serpentine heat exchanger includes flat multiport tubes bent into a serpentine shape, where each individual tube form a separate flow circuit, airside fins, either louvered or flat design, all-aluminum or copper/aluminum refrigerant connection pipes, and mountings. The coil design without manifolds maximizes heat transfer surface while making heat exchanger compact and easy in installation. Refrigerant connections can be arranged along the perimeter of the coil.

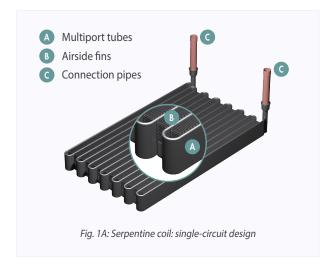

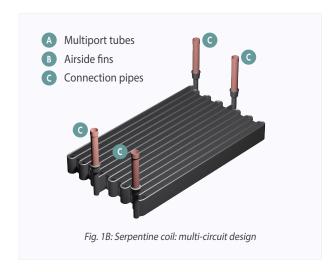


Kaltra offers serpentine coils to order, with the length varying from 50mm to 600mm and widths from 50mm to 500mm, with different tube widths, refrigerant connections and mountings to customer specification. The following table summarizes possible serpentine heat exchanger configurations and properties:

General specifications			
Property	Units		
Max length	mm	600	
Max width	mm	500	
Tube width	mm	12.0 / 16.0 / 18.8 / 20.0 / 22.0 / 25.4 / 32.0 / 36.0	
Tube spacing	mm	8.1 / 9.4 / 10.0	
Fin types		FLAT / LOUVERED	
Fin pitch	FPI	10 / 16 / 18 / 19 / 21 / 23 / 24 / BY REQUEST	
Design pressure	bar	20/32/45	
Burst pressure	bar	100 / 140	
Refrigerants		HFC / HFO / NATURAL	
Protective coatings		NONE / E-COATING / TCP-COATING	

Materials


Material properties are crucial for heat exchanger durability and corrosion resistance, especially when it comes to operating in aggressive atmospheres like highly-polluted industrial and urban areas, coastal zones, and other corrosive environments. To achieve the highest product performances, Kaltra uses aluminum alloys and clads of series 4xxx, 7xxx, as well as strong long-life alloys (SLLAs) of series 9xxx.

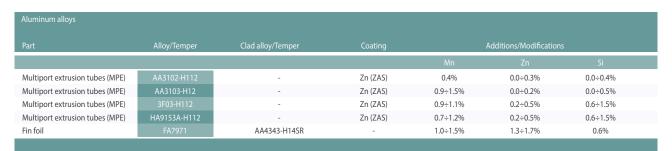


The manufacturing of microchannel heat exchangers is an industrial CAB process - stands for controlled atmosphere brazing. CAB process is a flux-aided furnace brazing process under an inert shielding gas (nitrogen). Flux is required to clean the surfaces of the aluminum parts from oxides. For its microchannel heat exchangers, Kaltra uses the latest generation fluxes designed to give corrosion protection by controlled zinc load in addition to providing fin-to-tube joint filler formation. The silicon particles in the coating form the joint by reacting with aluminum, therefore replacing the use of clad fin. Aluminum alloys coated such a way exhibit excellent corrosion properties due to the formation of dense band of precipitates.

Coatings provide additional protection against corrosion and abrasion for microchannel tubes. Zinc arc spray process, implicating the projection of atomized molten zinc onto the surface to create a protective zinc diffusion layer, is a principal method to achieve high corrosion protection used in the manufacturing of microchannel tubes used in Kaltra's heat exchangers.

Putting a zinc layer on top of an aluminum alloy protects the core of the tube by providing a preferred path for corrosion to spread. Zinc is a less noble element compared to aluminum alloys. Zinc acts as a sacrificial layer guiding corrosion along the surface of the tube instead of through the tube walls. This corrosion behavior will lengthen the lifetime of the tube. With zinc arc spraying, an even coating with a good metallic bond is formed on the tubes, and this zinc layer will diffuse into the microchannel tube core during brazing.



The dense band of precipitates (brown), formed during brazing of long-life alloys, is the key to producing the excellent corrosion performance compared with conventional alloys.




The composition of silicon and magnesium makes tube alloys easy to braze in the controlled atmosphere brazing process while showing good corrosion resistance after brazing.




Optimized aluminum alloy composition contributes to a high strength after brazing and provides sacrificial layer to improve the long-term corrosion resistance for microchannel tubes.

Microchannel Tubes

Serpentine coils can be configured and manufactured with flat microchannel tubes - also referred to as multiport extrusion (MPE) tubes - of different widths, geometry, port quantity, and port sizes, depending on customer requirements, refrigerant type, and performance demands. Standard or long-life aluminum alloys are the materials for microchannel tubes used in the manufacturing of Kaltra heat exchangers. High manganese-containing, zinc-coated long-life alloys exhibit excellent corrosion properties thanks to the formation of dense band of precipitates (DBP).

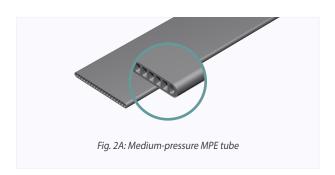

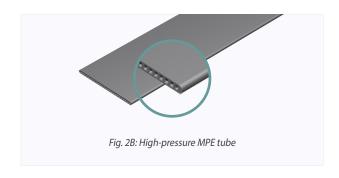



Microchannel tubes with higher wall thickness withstand corrosion better and recommended for installations in high-corrosive environments.



IMPORTANT

It is necessary to select microchannel tubes qualified for refrigerant used in the system. For allowable design operating and burst pressures, refer to the product label or documentation supplied with the heat exchanger.

Microchannel tubes are fabricated using direct hot extrusion through hollow dies and characterized by specifically selected alloys and coatings, tolerances, which have been optimized for special cooling and refrigeration applications. As standard, the following tubes with the widths from 12mm to 36mm are available for serpentine coils:

ochannel tube specifications - serpe	Titline cons					
Sectional view	Code	Tube width	Tube thickness	Ports	Wall thickness	Applications
		mm	mm		mm	
(00000000000)	H12/12-12	12.0	1.2	12	0.30	HIGH PRESSURE / MEDIUM PRESSURE
(0000000000000000)	H16/13-16	16.0	1.3	16	0.28	HIGH PRESSURE / MEDIUM PRESSURE
(11111111111111111111111111111111111111	S16/17-15	16.0	1.7	15	0.30	GENERAL PURPOSE / UNIVERSAL
	S18/19-13	18.8	1.9	13	0.28	LOW PRESSURE / MEDIUM PRESSURE
(00000000000000000000000000000000000000	H20/13-22	20.0	1.3	22	0.28	HIGH PRESSURE / MEDIUM PRESSURE
	S20/20-10	20.0	2.0	10	0.35	LOW PRESSURE / MEDIUM PRESSURE
	H20/20-12	20.0	2.0	12	0.27	LOW PRESSURE / MEDIUM PRESSURE
	S20/20-12	20.0	2.0	12	0.40	GENERAL PURPOSE / UNIVERSAL
	S22/20-12	22.0	2.0	10	0.35	GENERAL PURPOSE / UNIVERSAL
(11111111111111111111111111111111111111	H25/20-20	25.4	2.0	20	0.32	HIGH PRESSURE / MEDIUM PRESSURE
(00000000000000000000000000000000000000		25.4	1.3	26	0.28	HIGH PRESSURE
	S25/20-15	25.4	2.0	15	0.27	GENERAL PURPOSE / UNIVERSAL
	H25/20-13	25.4	2.0	13	0.33	HIGH PRESSURE / MEDIUM PRESSURE
000000000000000000000000000000000000000	H32/13-32	32.0	1.3	32	0.30	HIGH PRESSURE / MEDIUM PRESSURE
	S32/20-16	32.0	2.0	16	0.35	GENERAL PURPOSE / UNIVERSAL
	H32/20-25	32.0	2.0	25	0.32	HIGH PRESSURE / MEDIUM PRESSURE
000000000000000000000000000000000000000	H36/13-36	36.0	1.3	36	0.30	HIGH PRESSURE / MEDIUM PRESSURE
		36.0	2.0	26	0.33	HIGH PRESSURE / MEDIUM PRESSURE
000000000000000000000000000000000000000	H36/20-29	36.0	2.0	29	0.50	HIGH PRESSURE
	S36/20-16	36.0	2.0	16	0.36	GENERAL PURPOSE / UNIVERSAL

Airside Fins

Kaltra microchannel heat exchangers can be designed with either louvered or flat fins, depending on desired performance, application conditions and customer requirements. Louvered fins offer significantly higher heat transfer characteristics but also higher pressure drop on the airside, while heat exchangers with flat fins demonstrate better characteristics in some specific applications like operation in frosting conditions.

Louvered Fins


The louvered fins enhance the heat transfer by providing multiple flat-plate leading edges with their associated high values of heat transfer coefficient. Louvered fins enhance heat transfer by a factor of 2 to 3 compared with equivalent flat surfaces. The louvers have the further advantage that the enhancement of heat transfer is gained without a significant increase in flow resistance.

In louvered fins, fin height, louver angle, number of louvers, louver pitch and fin geometry as a whole are selected for an optimum balance of heat transfer and air resistance.

Flat Fins

Flat fins are generally suitable for applications with high refrigerant-to-air temperature difference. Flat fins are also preferable to operate in freezing conditions, and also less tend to foul.



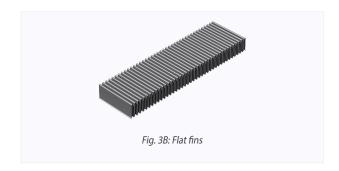

Heat exchangers can be manufactured with different fin pitches, from 10FPI to 24FPI, to suit desired performance, air resistance, and other requirements. Custom fin types and pitches are available on request. As standard, fin thickness is 0.08mm; fin height is 8.0 or 8.1mm; fin strip width matches microchannel tube width.

specifications - serpentine coils					
Sectional view	Code	Fin height	Fin width	Gauge	Fin density
Louvered fins		mm	mm	mm	FPI
	L81/120	8.10	12.0	0.08	21.0 / 23.0
	L81/160	8.10	16.0	0.08	18.0 / 19.5 / 21.0 / 23.0
	L80/188	8.00	18.8	0.08	21.0 / 23.0
	L81/200	8.10	20.0	0.08	21.0 / 23.0
	L80/200	8.00	20.0	0.08	10.0 / 16.0 / 19.5 / 21.0 / 23.0 / 24.0
	L80/220	8.00	22.0	0.08	21.0 / 23.0
, f.	L81/254	8.10	25.4	0.08	21.0 / 23.0
	L80/254	8.00	25.4	0.08	18.0 / 19.5 / 21.0 / 23.0
	L81/320	8.10	32.0	0.08	21.0 / 23.0
	L80/320	8.00	32.0	0.08	10.0 / 16.0 / 18.0 / 19.5 / 21.0 / 23.0 / 24.0
	L81/360	8.10	36.0	0.08	21.0 / 23.0
	L80/360	8.00	36.0	0.08	18.0 / 19.5 / 21.0 / 23.0
Flat fins		mm	mm	mm	FPI
NNN	F80/200	8.00	20.0	0.10	10.0
JUUl	F80/320	8.00	32.0	0.10	10.0

Refrigerant Connections

Customers may choose from all-aluminum or aluminum-copper connections. Latter type comprises of copper pipe soldered to aluminum end pipe of the coil. Diameter, length, bend angle, location - all are to the customer specification and can be chosen individually for refrigerant inlet and outlet.

Pipe connections may be located along the coil perimeter as per customer requirements. As a general rule for the condenser applications, inlet refrigerant connection shall be located higher than or at the same level as an outlet connection to allow gravity-assisted flow.



IMPORTANT

Consult with Kaltra engineers to select a connection type suitable for refrigerant to be used.



IMPORTANT

Serpentine condenser coil shall be installed in such a way as to ensure that outlet refrigerant connection is lower than or at the same level as the inlet connection.

Serpentine coils may be supplied with the following sealing fittings capping refrigerant pipes:

- Rubber plugs: for coils charged with the pressure lower than 1 bar
- · Plastic caps: for empty coils
- · No fittings: for empty coils

Mountings and Fixtures

Kaltra offers more than a dozen of mounting brackets of various geometries. These mountings are designed considering thermal expansion of the coil, to give flexibility in installation. Customized mounting fixtures and accessories are available on request.

Protective Coatings



IMPORTANT

Consult with Kaltra engineers regarding the best suitable protective solution for your heat exchanger application.

Corrosion, the deterioration of metals and alloys through a physical and/or chemical reaction with the environment, may affect the heat exchangers, specifically condenser and cooling/heating coils that are exposed in the environment, and this can lead to failures and performance degradation of the equipment in the cases of improper heat exchanger protection in corrosive locations. Potentially corrosive environments include coastal and marine areas, locations adjacent to industrial and urban areas, locations with proximity to heavy road traffic, factories, power plants, chemical plants, or the combinations of the above.

Unprotected heat exchangers, regardless of their type, are subjected to corrosion. Although all-aluminum microchannel coils tend to be less affected by corrosion compared to multi-metal coils, the protection must be applied in order to prevent deterioration in aggressive atmospheres. The highest level of corrosion resistance can be achieved with the right coil coating. For microchannel heat exchangers, the best coating option is factory-applied electrodeposition, which is also referred to as electrocoating (e-coating) or electrophoretic deposition, and produce uniform finishing with excellent corrosion resistance. The trivalent chromium process (TCP) coating is another efficient method of protection with excellent anti-corrosion properties. Kaltra offers both E-coating and TCP-coating as an option for all heat exchangers. Other coating types are available on request.

For more information on protective coatings and anti-corrosion solutions for microchannel heat exchangers, refer to appropriate Kaltra selection guidelines and manuals available online.



CAUTION

Coated coils are not intended for liquid immersion applications.



IMPORTANT

The effect of protective coatings on heat transfer rate is typically 1%, and up to 5% on airside pressure drop. These values shall be taken into account when selecting a heat exchanger.

Epoxy Electrophoretic Coating


Epoxy electrophoretic coating (e-coating) is a process based on the deposition of electrically charged particles out of a water suspension to coat a heat exchanger. During the process, paint is applied to a heat exchanger with particular film thickness regulated by the amount of applied voltage and builds up an electrically insulating layer. The deposition process is self-limiting and stops as the applied coating electrically insulates the surface of a heat exchanger – thus guaranteeing substantial film thickness and complete surface coverage for such complex-shaped parts as microchannel heat exchangers.

Electrocoat process includes four distinct phases:


- Pre-treatment: cleaning the heat exchanger surface and phosphating. This stage includes immersion degreasing, rinsing, and phosphating, which is essential to achieving performance requirements and guarantees that no contaminations in the form of acids or electrolytes enter the electrocoat bath
- Applying the coating in an electrocoat bath. The bath is filling with paint emulsion (10-20%), solvents, and deionized water (80% and more), which is used as a carrier for the paint solids. The electrocoat process is driven by a DC rectifier, used to control the amount of paint that is deposited onto the heat exchanger surface. Cathodic deposition method with positively charged paint particles which are attracted to negatively charged heat exchanger characterizes by better corrosion resistance and high UV resistance of the end-product compared to the anodic process. Thank electrical attraction, paint particles also penetrate the flaws and cracks in the metal
- Post-coating rinsing. Excessive paint is removed from the heat exchanger surface during this stage, providing a higher level of efficiency and aesthetics
- Thermal curing using bake oven. This process cures and cross-links the paint film to ensure maximum performance and corrosion resistance for the heat exchanger

Electrocoatings are typically made from polymeric resins, solvents and diluents, and pigments. Resin is a base of the paint which provides protection against corrosion and ultraviolet durability. Pigments and solvents provide coloring, glossing, and smooth appearance of the end product. The nature of the resins for the electrocoating can vary, but any type of resin feature functional groups in the backbone which allows them to become ionic in the presence of neutralizing agents. Electrocoating offers significant advantages over other coating technologies:

- High corrosion protection. Cathodic epoxy electrocoating with a film thickness of 20 microns withstands more than 6000 hours salt spray test performed in accordance with ASTM B117 standard, more than 4000 hours SWAAT performed in accordance with ASTM G85 Annex A3
- · Uniform coating with no more than 1-2 micron variances across the coated surface of any shape complexity
- Eco-friendliness: heavy metal free, no hazardous air pollutants (HAPS), low levels of organic solvents, and low volatile organic compounds (VOC)
- Aesthetic quality

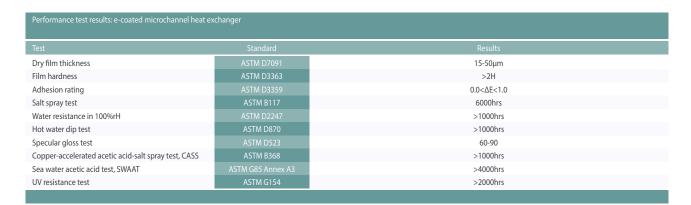



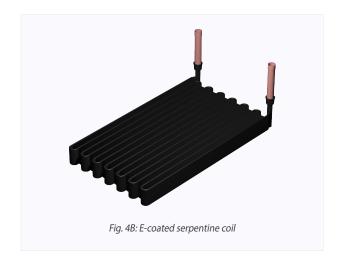

E-coating is resistant to the following chemicals at ambient temperatures. Elevated temperatures can have an adverse effect on the corrosion durability of the coating product, depending on the specific environment. Data for the corrosion resistance of e-coating in specific corrosive environments available upon request.


Acetates (all)	Acetic acid	Acetone	Acetylene	Acrylonitrile <10%
Alcohols (all)	Aldehydes (all)	Alum	Amines (all)	Amino acids
Ammonia	Ammonium hydroxide	Ammonium nitrate	Amiline	Benzene
Benzoic acid	Benzol	Borax	Boric acid	Butyl alcohol
Butyl cellosolve	Butyric acid	Calcium chloride	Calcium hypochlorite	Carbolic acid
Carbon dioxide	Carbon monoxide	Carbon tetrachloride	Carbonates (all)	Carbonic acid
Cetyl alcohol	Chlorides (all)	Chlorinated solvents (all)	Chlorine gas	Chloroform
Chromic acid	Citric acid	Creosol	Diesel fuel	Diethanolamine
sters (all)	Ethers (all)	Ethyl acetate	Ethyl alcohol	Ethyl ether
thylene oxide	Fatty acid	Fluorine gas	Formic acid <10%	Formaldehyde <27%
formic acid <10%	Freon	Fructose	Fuels (all)	Gasoline
Blucose	Glycols (all)	Hydrazine	Hydrocarbons (all)	Hydrochloric acid <10%
lydrofluoric acid	Hydrogen	Hydrogen peroxide 5%	Hydrogen sulfide	Hydroxylamine
odides (all)	lodine	Isobutyl alcohol	Isopropyl alcohol	Kerosene
(etones (all)	Lacquers	Lactic acid	Lactose	Lauryl acid
/lagnesium	Maleic acid	Menthol	Methanol	Methyl ethyl ketone
Methyl isobutyl ketone	Methylene chloride	Mustard gas	Naphthol	Nitric acid
litrides (all)	Nitrobenzene	Nitrogen fertilizers	Oils (mineral, vegetable)	Oleic acid
Oxalic acid	Ozone	Perchloric acid	Phenol 85%	Phenolphthalein
Phosgene	Phosphoric acid	Potassium chloride	Potassium hydroxide	Propane
ropyl alcohol	Propylene glycol	Salicylic acid	Salt water	Sodium bisulfite
odium chloride	Sodium hydroxide <10%	Sodium hypochlorite 5%	Sodium sulfate	Starch
tearic acid	Sucrose	Sulfate liquors	Sulfates (all)	Sulfides (all)
oulfites (all)	Sulfonic acid	Sulfur dioxide	Sulfuric acid 25-28%	Surfactants
annic acids	Tetraethyl lead	Toluene	Triethanolamine	Vinegar

Trivalent Chromium Process Coating

Trivalent chromium process (TCP) conversion coating is a type of conversion coating used to passivate aluminum alloys as a corrosion inhibitor. Unlike hexavalent chromium, trivalent chromium is non-toxic (both TCP bath and the resulting film contain no hexavalent chromium species) and fully complies with RoHS (Restriction of Hazardous Substances) requirements.

During TCP coating formation, activation of the aluminum surface leads to the reactions of oxygen reduction and hydrogen evolution, which results in the pH increase and the deposition of the TCP coating. TCP coating is characterized as a dense layer consisting of rounded particles hundreds of nanometre in size. The TCP coating consists of a two-layer structure, with zirconium-chromium oxide in the outer layer and aluminum oxide or oxyfluoride at the aluminum/coating interface. The TCP coating provides corrosion protection to aluminum alloys through suppressing the oxygen reduction reaction on aluminum alloy surfaces by acting as a protective barrier layer.

Trivalent chromium pretreatment demonstrates outstanding results for corrosion resistance and provides more than 3150 hours in neutral salt spray (ASTM B117), more than 2500 hours in sea water acetic acid test (SWAAT), and even longer for SLLA aluminum alloys used in Kaltra heat exchangers. TCP coating also exceeds dry tape adhesion requirements for ASTM D3359.



Applying of trivalent chromium process coating consists of the following steps (post-treatment is required depending on aluminum alloy grade being processed):

- Removing pollutants from the heat exchanger surface by rinsing and degreasing in an alkaline bath
- · Immersion in a desmutting bath in order to remove coarse intermetallic particles and native oxide
- · Forming of TCP coating by immersion of the heat exchanger in a trivalent conversion bath
- Post-treatment to reinforce the conversion layer and drying with the dried air stream
- · The heat exchanger is rinsed in deionized water following each step

HANDLING

STORAGE, HANDLING, AND TRANSPORTATION

Packing

Serpentine heat exchangers are supplied tightly packed in plywood or cardboard boxes to avoid sliding, moving, and deformation of the coils during transportation. Internal packing includes partitioning cardboards and plastic sealings to prevent heat exchangers from coming into contact with each other and with the crate walls.

Supplied heat exchangers are sealed and charged with nitrogen gas at 0.05÷0.20MPa pressure (except those shipped by air).



IMPORTANT

Handling instructions and crate content can be identified by reading stickers applied to the crate walls.

SERPENTINE COILS

Storage

Serpentine heat exchangers shall be stored indoors in a dry and clean environment under the following conditions:

- The storage temperature range is -40°C to 120°C (-40°F to 250°F)
- Avoid exposure to direct sunlight
- During storage, exposure to corrosive environments shall be effectively avoided
- Metal chips and/or copper or steel dust can cause galvanic corrosion: storage and installation areas must remain clean and separate from machining or welding areas
- · Heat exchangers shall be stored preferably in the original package until they are installed in the equipment
- Improper storage and stacking of microchannel heat exchanger can cause premature corrosion or deformation and may reduce its service life
- With prolonged storage, suitable measures for additional corrosion protection should be implemented following consultation with Kaltra



IMPORTANT

Heat exchangers must be stored free of fluids and with protective caps on refrigerant connection pipes to avoid corrosion and/or contamination.

Handling

Although serpentine coils are robust construction, care must be taken to ensure that damages and leaks are not caused by improper handling. Clean the heat exchanger prior to installation, if necessary. Do not use chemicals for cleaning. Rinse only! For details of the cleaning procedure, refer to the appropriate section of the present manual.



CAUTION

Avoid dropping, impacting, placing heavy objects on top of, stepping on microchannel coil as this may cause coil damages.



CAUTION

Check the heat exchanger is as ordered, discrepancies or transit damage should be reported to Kaltra immediately. Care should be taken to ensure the unit does not sustain damage before it is installed.

Transportation

Heat exchangers can be transported individually or stacked on wooden pallets. It is recommended to transport heat exchangers for long-distance hauls in the original package.



CAUTION

During transportation and handling, avoid exerting undue pressures, accidental hits, and avoid any shocks that could damage the product.

INSTALLATION

The installation should be carried out by trained and experienced specialists in accordance with common refrigeration practice, recommendations of the present manual, local rules and requirements and directives in force.



IMPORTANT

Kaltra takes no responsibility for improper installation, which may cause heat exchanger malfunction or damage to the equipment.

System designer and installing engineer should be responsible for checking and observing all the requirements in accordance with system application and installation.



IMPORTANT

Prior to installation, clean heat exchanger, if necessary. Refer to the appropriate section in the present manual for cleaning instructions. Evacuate nitrogen gas from the coil. It is recommended to insert connection plugs back and not to remove plugs until required.

Mounting

Heat exchanger mounting shall be conducted with attention to the airtightness of assembly, thermal expansion/contraction of the coil due to ambient and/or refrigerant temperature change, vibrations induced by unit components like fans and compressors. Special attention shall be paid to eliminate direct contact between aluminum coil core and other equipment parts/components made of dissimilar metals as this may cause galvanic corrosion.

Airtightness

In order to maximize heat exchanger performance, it shall be sealed with rubber or plastic band all round. This way, airtight minimizes airflow waste, even in the case of thermal coil contraction. Inter alia, rubber/plastic band isolates serpentine coil from the framing, thus eliminating a possible source of corrosion, while minimizes vibration issues.

Thermal Expansion



IMPORTANT

The thermal expansion of aluminum is higher than most other metals, and this shall be taken into account during the system design phase and its installation.

The table herein shows the minimum recommended allowance for thermal expansion based on the heat exchanger dimensions, assuming an 80°C temperature differential. If high ambient or low ambient operation is expected, thermal expansion allowance shall be increased based on the maximum discharge temperature at the high-pressure safety cutout, minus the lowest expected ambient operating temperature.

Thermal expansion allowances	
Heat exchanger length/width	Thermal expansion allowance 1
mm	mm
≤200	0.25
≤350	0.40
≤500	0.60
≤600	0.70

^{1 -} for 80°C temperature differential

To avoid the risk coil damage caused by thermal expansion, serpentine coils shall be mounted with fixtures allowing the coil to expand freely in both horizontal and vertical directions. The same shall be taken into account when locating the refrigerant pipe supports. Inlet/outlet refrigerant connections shall be supported so that the brazed joints are not exposed to stress or tension.

Vibration and Stresses

Vibrations that exceed allowable range may cause leaks and other failures of heat exchangers. The below table indicates the allowable vibration range. Make sure the levels of vibrations do not exceed specified limits.



CAUTION

Warranty does not cover the cases related to heat exchanger damage caused by exceeding vibrations.

The recommended method of eliminating vibrations is using rubber/plastic washers on coil fixtures.

Vibration allowances		
Property		Allowance
Amplitude	mm	≤0.15
Amplitude Peak amplitude	mm	0.25
Acceleration	m⋅s ⁻²	≤20

Connecting Refrigerant Lines

In order to join the coil with copper refrigerant pipework of the unit, the coils have a manufactured brazed copper-to-aluminum connection. The protection of this joint is required when brazing the copper-to-copper connections. This can be accomplished by placing a wet rag over the coil connection during the brazing process.



CAUTION

When brazing in the new serpentine coil, the temperature at the copper-to-aluminum joint must not exceed 250°C. Failure to follow this requirement could result in coil damage.



IMPORTANT

Place an aluminum splatter shield using aluminum foil tape during the brazing to protect the heat exchanger from galvanic corrosion associated with splatter during the brazing process.

Refrigerant Charge and Evacuation

It is essential that the system is charged with the correct amount of refrigerant. Remember, an overcharged or undercharged system may lead to major component failure. The final refrigerant charge level should be set by the design evaporating and condensing pressures. The suction and discharge pressures should be continuously monitored while charging is in progress.



CAUTION

Do not pressurize the system higher than the design pressure marked on the unit's nameplate as over-pressurization of the refrigeration system can cause explosive discharge of high-pressure refrigerant, loss of refrigerant, environmental pollution, equipment damage, injury, or death.



CAUTION

Heat exchangers may be shipped with a holding charge of inert gas. The charge should be checked to indicate if leaks are present before evacuation. If the charge appears to be either partially or totally lost, then the heat exchanger shall be checked for signs of physical damage.



CAUTION

Pressure testing can be dangerous if not properly conducted. Personnel undertaking pressure testing must be technically competent and suitably qualified.

MAINTENANCE

Timely servicing is essential to maintain optimum performance of the heat exchanger and ensure its long operating life. Observe Kaltra's recommendation on the after-sale service described below.



CAUTION

All work must be carried out by technically trained competent personnel. Prior to servicing heat exchangers, be sure to disconnect the power supply and lock power switch to prevent the power from accidentally being turned on.



CAUTION

It is owner responsibility to provide scheduled maintenance in accordance with the schedule and requirements mentioned below. Incorrect maintenance within warranty period invalidates warranty obligations of the manufacturer. It is important to follow maintenance schedule as a minimum not only for warranty period but for the whole life time of the heat exchanger.

- · All service records shall be accurately documented
- · Appropriate service tools, test and safety equipment should be employed for maintenance works

Maintenance Schedule

The maintenance schedule indicates the time between maintenance operations. It is necessary to carry out all maintenance tasks described below in case the system has been stopped for a period longer than three months.

Maintenance schedule	
Item	Work description
Interval: 6 months	
Cleaning ¹	Check if heat exchanger cleaning is required and perform cleaning procedure as described in the present manual.
Check for vibrations	Check if vibrations do not exceed allowable limits and eliminate vibration source, if necessary.
Check heat exchanger condition	Check the heat exchanger visually for mechanical damages; check the condition of rubber/plastic elements and replace, if necessary.
Leakage check1	Check the heat exchanger visually for leakages or traces of fluid spill outs. Pay special attention to refrigerant connections. Perform repair, if necessary.
Interval: 12 months	
Assembly check	Check all bolted connections for tightness. Tighten connections, if necessary.
Check for corrosion ¹	Check the heat exchanger for traces of corrosion.
Coating check ¹	For heat exchangers with protective coatings, check the coating for scratches. Repair, if necessary.

¹⁻ Inspection and maintenance intervals should be shortened according to the actual situation if the heat exchanger operated in aggressive, corrosive, or highly-polluted environments.

Cleaning Procedure

The build-up of dirt on the aluminum surface, which is exposed to moisture, can reduce the durability of the heat exchanger. Regular cleaning of the heat exchanger ensures its high efficiency in operation.



CAUTION

Warranty claims related to cleaning damage or corrosion resulting from chemical coil cleaners, will not be honored.

In comparison to finned tube heat exchangers, serpentine coils tend to accumulate dirt and debris on the surface rather than inside, making them easy to clean. The cleaning procedure for serpentine heat exchangers includes the following steps:

- Remove dirt and debris from the coil surface with a soft brush or vacuum cleaner with a soft attachment or compressed air blower (3 to 5 bar)
- Rinse the coil with water (pH in range 4.5÷8.5), including general detergents. Do not use chemicals to avoid corrosion potential. Use the water-atomizing nozzle to prevent possible damages from the water stream. Water pressure must be controlled to prevent damage to the fins: sprayer nozzle pressure should not exceed 40 bar
- · Serpentine coils could retain water after cleaning. Blow off or vacuum out the residual water from the coil to speed up drying

KALTRA SERPENTINE COILS

À	CAUTION	During cleaning, wear proper personal protective equipment such as a face shield, gloves, and waterproof clothing.
\triangle	CAUTION	Brush the coil in the longitudinal direction of fins only.
\triangle	CAUTION	Align the cleaning nozzle at the angle to coil fins. Nozzle angle should not exceed 25 degrees to the coil surface.
\triangle	CAUTION	During high-pressure cleaning, keep the minimum distance of 400mm from the spraying nozzle to the coil surface.
(!)	IMPORTANT	Clean the coil from the opposite direction of normal air flow as this allows the debris to be pushed out rather than forced further into the coil.

SERVICES

Engineering

Kaltra specialists quickly and professionally help customers to choose the necessary type and configuration of the microchannel heat exchangers, calculate technical parameters, determine the best suitable type of aluminum alloys, connections, mountings options, as well as other characteristics in accordance with actual requirements and recommendations.

In accordance with the agreed parameters, Kaltra engineers promptly prepare the corresponding drawings, 3D models, and other necessary documentation. Drawings include complete details, dimensioning, tolerances, and heat exchanger specification.

Selection Software

MCHE selection software includes condenser, evaporator, heat pump, and water coils, making it a complete selection and calculation tool for refrigeration professionals.

The software provides selections and ratings for microchannel heat exchangers which enables the user to select the best-suited product based on several deciding parameters such as heat exchanger application, cooling capacity, refrigerant, evaporation and condensation temperatures, airflow and air temperature and other critical variables in refrigeration systems.

The latest version of MCHE selection software is available for download at Kaltra website: https://www.kaltra.com/software-inquiry Online information on Kaltra microchannel heat exchangers: https://www.kaltra.com/microchannel-heat-exchangers

KALTRA SERPENTINE COILS

NOTES	



Kaltra GmbH

Head office:

Viktualienmarkt 8 80331 Munich Germany

1


+49(0)911 715 32021

 \boxtimes

info@kaltra.de



www.kaltra.com

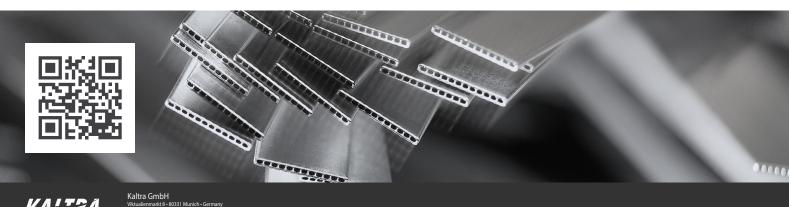



info@kaltra.de
1 +49(0)911 715 32021